

Family Software

3164 Surrey Lane # Aston, PA 19014 # (610) 497-5561

'Drag Racing Computers and Software' www.ifamilysoftware.com

DataMaster | Analyzer Version 4.0 - Instructions

Our DataMaster |

Starting RPM - Specifies at what RPM the graph is to start plotting data.

View Data - This function is used to view the tabular data for the run. There are two different screens available for tabular data. One for Engine RPM and one for Shaft RPM. The following is a description of each label:

Line - This is the line number for a particular row of data. Each line, or row, of data represents one (1) revolution of the crankshaft or one (1) revolution of the drive shaft. Therefore, the line number is also the rev count.

Time - This is the time elapsed from the beginning of the run to this particular revolution expressed as a decimal number with a resolution of 1-1/1000ths of a second.

Feet - This is the distance in mcis atso the ulawheels